

How to Connect Viewer with Camera

Step 1: Go to Local settings and find Connections




Step 2: Under **Connections**, find hotspots, and **Enable** the hotspots



Step 3: Click **QR Code** and use **Viewer** to **Scan QR Code** to join the hotspot. Then you can check live view on your phone.



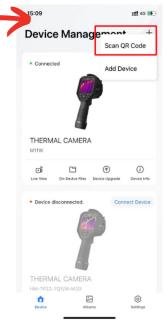

CREATING HEALTHY INDOOR ENVIRONMENTS

"On The Job" Industry Experience Since 1995









